

 

 
 
 

 


 
 
 


 



 





 
 
 

 


 

 


 

 

 






 


 


 
 
 
 
 
 

 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 1	 1	 Stop	 Stop
 2	 2	 >>	 >>
 3	 3	 <<	 <<
 4	 4	 >>	 >>
 6	 6	  <<	  <<
 5	 5	 Option	 Options
 7	 7	 Display	 Info
 8	 8	 Enter	 Ok
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Vol+	 Vol +	 Right	 Right
 Vol-	 Vol -	 Left	 Left
 Mute	 Mute	 Folder Up	 Ch +
 Repeat	 Text	 Folder Down	 Ch -
 Shuffle	 Media	 Clear	 Exit
 Play	 Play	 Sleep	 Sleep





Original	Replacement
DIMMER	Dimmer
TP	TP
MONO	Mono
PRESET	Preset Up
PRESET	Preset Down
MEMORY	Memory
TUNING	Tuning Up
TUNING	Tuning Down
CD	CD
USB	USB
AUX	AUX
TUNER	Tuner
iPod	iPod
Folder Up iPod	Folder Up iPod
Folder Down iPod	Folder Down iPod
REPEAT	Repeat iPod
SHUFFLE	Shuffle iPod

Original	Replacement
SEARCH TV/R	TV/R
FAV PRE-CH	Pre Ch
SOUND DUAL	Dual
ENTER	Enter iPod
>>I	>>I iPod
I<<	I<< iPod
MENU	Menu iPod
Play/Pause	Play/Pause iPod
Open/Close	Open/Close
CLOCK	Clock
TIMER	Timer
SHIFT + OK	Shift + Ok
SHIFT + Right	Shift + Right
SHIFT + Left	Shift + Left
SHIFT + Up	Shift + Up
SHIFT + Down	Shift + Down
REC MODE	Rec
B	Green
A	Red
SHIFT + 1	Shift + 1
SHIFT + 2	Shift + 2
SHIFT + 3	Shift + 3
SHIFT + 4	Shift + 4
SHIFT + 5	Shift + 5
SHIFT + + CH	Shift + Ch +
SHIFT + - CH	Shift + Ch -
HOME SMART	Smart
SHIFT + APP MEDIA	Shift + Media

