





 






 




 


 
 
 

 
 












 


 
 
 








 

 



 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Source	 AV
 -/--	 Shift + Guide	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Nicam	 Smart	 Sleep	 Sleep
 Tv/Radio	 TV/R	 List	 List
 Display	 Info	 FAV	 Pre Ch



