
 






 
 




Original	Replacement
 Power	 Power
 Menu	 Menu
 Text	 Text
 [+]/Aspect	 Format
 [≡◆]/STTL	 Subt
 Input TV	 TV/R
 Input AV	 AV
 i	 Info
 X/Exit	 Exit
 Back/Return	 Back
 Option	 Options
 Home	 Smart
 APPS	 Media
 Guide	 Guide
 OK	 Ok
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	0		0				
	Off Timer		3D				
	Last View		Pre Ch				
	?/Help		D. Menu				
	Play		Play				
	>>		>>				
	<<		<<				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Stop		Stop				
	Rec		Rec				

