



Original	Replacement
 Picture Navi	 Picture / Format
 Input Tv	 AV / Input / RDS
 Power Tv	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 Vol-	 Vol-
 7	 7
 8	 8
 9	 9
 Time/Text	 Text / Goto
 Clear	 Exit / Cancel / Clear

Original	Replacement
 0	 0
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 I<<	 I<< / Preset-
 ←/<	 CH- / Page-
 >/→	 CH+ / Page+
 >>	 >> / Preset+
 <</<	 << / Tune-





Original	Replacement	Original	Replacement
	Play		Play / Slow
	>/>>		>> / Tune+
	Fast/Slow Play		Smart / List
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Original	Replacement	Original	Replacement

