 


 
 

 
 
 
 


 





 



 

 













 





Original	Replacement
 Power	 Power
 3D	 Shift + 3
 TV	 Shift + 1
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Eco	 Display / Media
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+

Original	Replacement
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Info	 Info / Angle
 Option	 Setup / OPT /
 Smart Tv	 Smart / List
 Guide	 Guide / EPG / -/-
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Zoom-	 Shift + Down





Original	Replacement
Zoom+	Shift + Up
@/Home	D.Menu / Top
Sleep	Sleep / Timer
Pre-CH	Shift + Back / Return
FAV	Fav / Marker / PC
List	Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
OO/Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
>	>> / Preset+
<<	<< / Tune-
Rec	Rec / Rec Mode
>>	>> / Tune+

