 

 

 

 
 




 









 
 
 
 
 

 



 



 









 
 
 























Original		Replacement		Original		Replacement	
	Power		Power		Zoom		Zoom / Size
	DVD/CD		Shift + 2		Playlist2		Green / APP / Repeat
	Tuner(FM/AM)		Shift + 6		7		7
	Sound Retreiver		Shift + Sound / Title		8		8
	USB		Shift + 8		9		9
	Line		TV/Radio /		Playlist3		Yellow / YouTube / Repeat
	Open/Close		Eject / Surround		Clear		Exit / Cancel / Clear
	1		1		0		0
	2		2		Display		Display / Media
	Audio		Audio / Lang I/II		Top Menu		D.Menu / Top
	3		3		Setup		Setup / OPT /
	Subtitle		Subtitle / EQ		Up/Tune+		Up
	Playlist1		Red / Netflix / Search		Menu		Menu / Home
	4		4		SR+		Picture / Format
	5		5		Left/ST-		Left
	Angle		Info / Angle		Enter		OK
	6		6		Right/ST+		Right





Original	Replacement	Original	Replacement
 MCACC	 Smart / List	 CH+ Tv	 CH+ / Page+
 Home Menu	 Shift + Menu /	 Vol+ Tv	 Shift + Vol+
 Down/Tune-	 Down	 Sleep	 Sleep / Timer
 Return	 Back / Return	 Input Tv	 AV / Input / RDS
 Test Tone	 Guide / EPG / -/--	 CH- Tv	 CH- / Page-
 F.S.Surr	 Fav / Marker / PC	 Vol- Tv	 Shift + Vol-
 Surround	 Shift + Eject / Surround	 Mute	 Mute / Dimmer
 Advanced	 Text / Goto	 Vol-	 Vol-
 Sound	 Sound / Title	 Vol+	 Vol+
 <</<I/<II	 << / Tune-		
 Play	 Play / Slow		
 >>/I>/II>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Power Tv	 Shift + Power		

