

 




 
 



 






 
 





 



 

 


 







 
 







 







 









 
 
 

 

 
 
 
 
 






 


 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow



Play/Pause



Original		Replacement		Original		Replacement	
	Blue / Text		Blue				
	Red / Zoom		Eject				
	Green / Lan/Audio		Dual				
	Yellow /		Play				
	Yellow /		Pause				
	Blue / Text		Text				
	<< / Tv/Radio		<<				
	<< / Tv/Radio		TV/R				
	>> / Subtitle		>>				
	>> / Subtitle		Subt				

