 




 
 

 
 
 

 



 
 
 


 
 


 
 

 

 

 



 



 
 


 

 

 

 



 

















Original	Replacement	Original	Replacement
	Power		Power
	Audio Monitor		Audio / Lang I/II
	Wide		Picture / Format
	Tv/Video		TV/Radio /
	[≡]		Text / Goto
	Tv/Video		AV / Input / RDS
	Vol+		Vol+
	[ ]		Info / Angle
	Prog+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	Prog-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random






 
 

 









 







Original		Replacement		Original		Replacement	
	Eject		Eject / Surround		4		4
	Power		Power		5		5
	Audio Monitor		Audio / Lang I/II		6		6
	Wide		Picture / Format		7		7
	Counter Remain		Yellow / YouTube / Repeat		8		8
	[ ]		Info / Angle		9		9
	I> Slow		Shift + Play /		-/--		Guide / EPG / -/--
	X2		Shift + >> /		0		0
	I<< Index Search		I<< / Preset-		Input Select		AV / Input / RDS
	Index Search >>I		>>I / Preset+		Vol+		Vol+
	Display		Display / Media		Prog+		CH+ / Page+
	SP/LP		Green / APP / Repeat		Vol-		Vol-
	Clear		Exit / Cancel / Clear		Prog-		CH- / Page-
	Tv/Video		TV/Radio /		Rec		Rec / Rec Mode
	1		1		Pause		Pause / Step / Freeze
	2		2		Up		Up
	3		3		Timer		Sleep / Timer





Original	Replacement	Original	Replacement
 Menu	 Menu / Home		
 Smart Search	 Smart / List		
 Smart Search	 Red / Netflix / Search		
 <<	 << / Tune-		
 Left	 Left		
 Play	 Play / Slow		
 OK	 OK		
 >>	 >> / Tune+		
 Right	 Right		
 Stop	 Stop / Hold		
 Down	 Down		

