

 



 
 
 


 

 

 





 

 
 


 


 



 


 
 


 
 




 

 





 
 


 
 
 


 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 CH+	 Ch +
 4	 4	 Down	 Down
 5	 5	 CH-	 Ch -
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol +
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol -
 0	 0	 OK	 Ok
 FAV	 Pre Ch	 Text	 Text
 Recall	 Back	 Red	 Red
 Audio	 Dual	 Green	 Green
 Subtitle	 Subt	 Pause	 Pause
 Info	 Info	 Yellow	 Yellow





Original	Replacement	Original	Replacement
 Tv/Radio	 TV/R		
 Blue	 D		

Original	Replacement

