











 





 





 

 
 










Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Back / Return
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 D.Menu / Top
	 Info / Angle
	 Guide / EPG / -/--
	 Vol+

Original	Replacement
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Fav / Marker / PC
	 0
	 Fav / Marker / PC
	 Picture / Format





Original	Replacement	Original	Replacement
LANG	Lang	LANG /II AUDIO	Audio / Lang I/II
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
(O)	(O)	MEDIA DISPLAY	Display / Media
O/World	O/World	LIST SMART	Smart / List
[≡x]	[≡x]	PROGRAM TV/RADIO	TV/Radio /
[≡]	[≡]	GOTO TEXT	Text / Goto

