













 





 







 

 







Original	Replacement
 Power	 Power
 Tv/Rad	 TV/Radio /
 Source	 AV / Input / RDS
 *	 D.Menu / Top
 Live Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 Guide	 Guide / EPG / -/--
 Vol+	 Vol+
 Info/Quick Access	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Search	 Picture / Format
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 Amazon	 Shift + Blue / Prime
 Back	 Back / Return
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right





Original	Replacement
Text	Text / Goto
Down	Down
T.Opt	Setup / OPT /
AD/*	Audio / Lang I/II
Rec/*	Rec / Rec Mode
Stop	Stop / Hold
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

