 


 
 

 
 
 
 

 

 
 
 



 


 








 
 


 

 
 
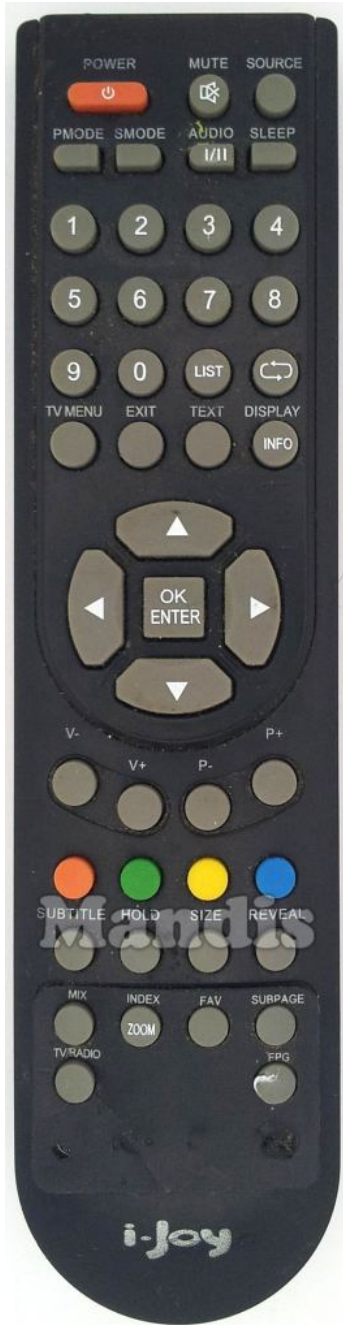 


Original	Replacement
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I/II/Audio	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 List	 List
 Recall	 Back
 Tv Menu	 Menu
 Exit	 Exit
 Text	 Text
 Info/Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Subtitle		Subt				
	Hold		Options				
	Size		Format				
	Reveal		Smart				
	Mix		Media				
	Zoom/Index		Eject				
	FAV		Pre Ch				
	Subpage		3D				
	Tv/Radio		TV/R				
	EPG		Guide				

