



Original	Replacement	Original	Replacement
	Power		ECO
	1		TV / 1
	2		DVD / 2
	3		CD - STB / 3
	4		VIDEO / 4
	5		TAPE / 5
	6		TUNER / 6
	7		AUX - HDD / 7
	8		USB / 8
	9		BLUETOOTH / 9
	0		HDMI - SAT / 0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	CEC		Display / Media
	Mute		Smart / List
	i		Mute / Dimmer
	Z/Back		Info / Angle
	PR+		Back / Return
	Up		CH+ / Page+
	Vol-		Up
	Left		Vol-
	OK		Left
	Right		OK
	Vol+		Right
	Down		Vol+
	PR-		Down
	TVG/Top Menu		CH- / Page-
	TVG/Top Menu		TVG/Top Menu
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto








































	Original	Replacement	Original	Replacement
		TXT/Menu		Menu / Home
		Red		Red / Netflix / Search
		Green		Green / APP / Repeat
		Yellow		Yellow / YouTube / Repeat
		Blue		Blue / Prime Video / Random
		[<>]		Shift + Zoom /
		Rec/l>		Rec / Rec Mode
		Play		Play / Slow
		Pause		Pause / Step / Freeze
		Stop		Stop / Hold
		<		<< / Preset-
		>		>> / Preset+
		<<		<< / Tune-
		>>		>> / Tune+





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Menu / Home





Original	Replacement	Original	Replacement
	TXT/Menu		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		PR+
	8		CH+ / Page+
	9		Up
	0		Vol-
	AV/CL		Left
	Zoom		OK
	[...]/Subtitle		Right
	Audio/Language		Vol+
	◀/Camera		Down
	?		PR-
			CH- / Page-
			TVG/Top Menu
			TVG/Top Menu
			Guide / EPG / -/--
			D.Menu / Top
			TXT/Menu
			Text / Goto

 















 























 

 

 





 





 

 












	Original	Replacement	Original	Replacement
	Red			
	Green			
	Yellow			
	Blue			
	[<>]			
	Rec/l>			
	Play			
	Pause			
	Stop			
	<			
	>			
	<<			
	>>			




 






 



 



 













Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

