



	Original	Replacement		Original	Replacement
	Power	Power		Exit	Exit
	Mute	Mute		Up	Up
	1	1		Down	Down
	2	2		Right	Right
	3	3		Left	Left
	4	4		Ok	Ok
	5	5		Vol+	Vol +
	6	6		Vol-	Vol -
	7	7		Sound	Shift + Dual
	8	8		Pic	Shift + Format
	9	9		Ch+	Ch +
	0	0		Ch-	Ch -
	Audio	Dual		Sleep	Sleep
	Recall	Back		Aspect	Format
	Tv Menu	Menu		Freeze	Eject
	Source	AV		Tv/Radio	TV/R
	ChList	List		Text	Text



