 

 

 


 
 

 

 
 


 
 
 

 



 
 

 
 
 



 
 

 
 


 
 



 
 
 
 
 
 
 
 
 
 

 

 

 



 



 

 

 

 



 


 
 

 





 

 


 
 

 


 

 



 
 
 

 

 


 




Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Input 1	 Shift + 1	 6	 6
 Input 2	 Shift + 2	 7	 7
 Input 3	 Shift + 3	 8	 8
 Input 4	 Shift + 4	 9	 9
 Input 5	 Shift + 5	 0	 0
 PC	 Smart	 EPG/DVD Top Menu/Guide	 Guide
 HMG	 Media	 TV/DTV/SAT	 TV/R
 [i+]/Timer/Info	 Info	 P+	 Ch +
 [-]	 3D	 P-	 Ch -
 [↔]	 Format	 Vol+	 Vol +
 [←]	 Pre Ch	 Vol-	 Vol -
 CTRL HDMI	 AV	 Enter	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left



 

 


 





 

 
 


 


 




Original	Replacement	Original	Replacement
	Exit		Exit
	Tools		Options
	Home		Menu
	Return		Back
	Mute		Mute
	CH Return		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play
	I<<<		I<<<
	[...]		Subt
	>>>I		>>>I
	[≡?]		Eject
	<<<		<<<
	>>>		>>>
	[≡i]		List
	[≡]		Text
	[ - ]DVD/[+]		Shift + Options
	[<>]/HDD		Shift + Format
	I-II		Dual





 
 


 

 







 



 
 
 



 



 
 











 
 

 


 
 
 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 Menu/Home	 Menu
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Mute Tv	 Mute





Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back
 [i+]/Timer/Info	 Info	 OK	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 Vol+ Tv	 Vol +
 6	 6	 Vol- Tv	 Vol -
 7	 7	 Mute Tv	 Mute
 8	 8		
 9	 9		
 0	 0		
 EPG/DVD Top Menu/Guide	 Guide		
 P+	 Ch +		
 P-	 Ch -		
 X/Exit	 Exit		
 Menu/Home	 Menu		



Menu



Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		Ch +
	P-		Ch -
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play

Original		Replacement	
	I<<		I<<
	>>I		>>I
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute Tv		Mute

