






 

 

 

 
 
 

 



 






	Original	Replacement		Original	Replacement
	Standby		Power		Tv/Radio
	Source		AV		TV/R
	1		1		Vol +
	2		2		Vol -
	3		3		Mute
	4		4		Mute
	5		5		Ch +
	6		6		Ch -
	7		7		Menu
	8		8		Exit
	9		9		Up
	0		0		Down
	[*]/Display		Info		Right
	Recall		Back		Left
	Freeze		Options		Enter
	P.Mode		Format		TXT
	S.Mode		Dual		Play
					Pause/Time Shift
					Stop/EPG
					Play
					Pause
					Stop





Original		Replacement		Original		Replacement	
	Record		Rec				
	<</Index		<<				
	>>/Hold		>>				
	I<</Reveal		I<<				
	>>I/Subpage		>>I				
	Mix/Fav List		Pre Ch				
	Size/Subtitle		Subt				
	Cancel/Audio		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

