

 
 













 



 

 


 

 
 
 



 
 
 

 


 
 

 
 
 




 
 

 

 







 
 
 





Original		Replacement		Original		Replacement	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[*]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





Original	Replacement	Original	Replacement
 Record	 Rec		
 <</Index	 <<		
 >>/Hold	 >>		
 I<</Reveal	 I<<		
 >>I/Subpage	 >>I		
 Mix/Fav List	 Pre Ch		
 Size/Subtitle	 Subt		
 Cancel/Audio	 3D		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Replacement	Original	Replacement

