



Original	Replacement	Original	Replacement
	Eject / Surround		Vol-
	Power		<< / Tune-
	1		>> / Tune+
	2		I<< / Preset-
	3		>>I / Preset+
	Blue / Prime Video / Random		Pause / Step / Freeze
	4		Play / Slow
	5		Stop / Hold
	6		Menu / Home
	Mute / Dimmer		Up
	7		Setup / OPT /
	8		Left
	9		OK
	Vol+		Right
	0		Sound / Title
	Guide / EPG / -/--		Down
	Text / Goto		Display / Media





Original		Replacement		Original		Replacement	
	Zoom		Zoom / Size				
	Angle		Info / Angle				
	Audio		Audio / Lang I/II				
	Sub-T		Subtitle / EQ				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Slow		Shift + Play /				
	L/R		Red / Netflix / Search				
	Prog		TV/Radio /				
	Return		Back / Return				
	Video		Shift + 4				
	HDMI		Shift + 0				

