



| Original | Replacement   | Original | Replacement                 |
|----------|---------------|----------|-----------------------------|
|          | Power         |          | Power                       |
|          | SD Card       |          | D.Menu / Top                |
|          | TV Input      |          | TV/Radio /                  |
|          | AV Input      |          | AV / Input / RDS            |
|          | Menu          |          | Menu / Home                 |
|          | Aspect        |          | Picture / Format            |
|          | Cast Viera    |          | Shift + Smart / List        |
|          | Direct TV Rec |          | Shift + Rec / Rec Mode      |
|          | i             |          | Info / Angle                |
|          | Exit          |          | Exit / Cancel / Clear       |
|          | Viera Tools   |          | Display / Media             |
|          | Viera Link    |          | Smart / List                |
|          | Up            |          | Up                          |
|          | Guide         |          | Guide / EPG / -/--          |
|          | Left          |          | Left                        |
|          | OK            |          | OK                          |
|          | Right         |          | Right                       |
|          | Option        |          | Setup / OPT /               |
|          | Down          |          | Down                        |
|          | Back/Return   |          | Back / Return               |
|          | Red           |          | Red / Netflix / Search      |
|          | Green         |          | Green / APP / Repeat        |
|          | Yellow        |          | Yellow / YouTube / Repeat   |
|          | Blue          |          | Blue / Prime Video / Random |
|          | Text          |          | Text / Goto                 |
|          | STTL          |          | Subtitle / EQ               |
|          | Index         |          | Shift + AV / Input / RDS    |
|          | Hold          |          | Shift + Stop /              |
|          | 1             |          | 1                           |
|          | 2             |          | 2                           |
|          | 3             |          | 3                           |
|          | 4             |          | 4                           |
|          | 5             |          | 5                           |
|          | 6             |          | 6                           |





|  | Original     | Replacement |  | Original        | Replacement           |
|--|--------------|-------------|--|-----------------|-----------------------|
|  | 7            |             |  | Stop            | Stop / Hold           |
|  | 8            |             |  | Pause/Step II > | Pause / Step / Freeze |
|  | 9            |             |  |                 |                       |
|  | Mute         |             |  |                 |                       |
|  | 0            |             |  |                 |                       |
|  | Last View    |             |  |                 |                       |
|  | Vol+         |             |  |                 |                       |
|  | CH+          |             |  |                 |                       |
|  | Vol-         |             |  |                 |                       |
|  | CH-          |             |  |                 |                       |
|  | Second Power |             |  |                 |                       |
|  | Rec          |             |  |                 |                       |
|  | Programme ▾  |             |  |                 |                       |
|  | Programme ▴  |             |  |                 |                       |
|  | <<           |             |  |                 |                       |
|  | Play         |             |  |                 |                       |
|  | >>           |             |  |                 |                       |

