 



 
 









Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Tv/DTV		Setup / OPT /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	[≡]/Text		Text / Goto
	Down		Down
	Back		Back / Return
	P+		CH+ / Page+
	Vol+		Vol+
	P-		CH- / Page-
	Vol-		Vol-
	[^]/[+]		Smart / List
	<<		<< / Tune-
	Tv/Radio/[?]		TV/Radio /





Original	Replacement	Original	Replacement
	Power		Power
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	↑		CH+ / Page+
	↓		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec/Top Menu		D.Menu / Top
	Rec/Top Menu		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze



