

Original	Replacement	Original	Replacement
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ >>I / Preset+
Right		>>	TUNE+ >> / Tune+
Left		Play	SLOW Play / Slow
Back		AD / PIP	TITLE SOUND
Vol +		<<	PRESET- I<< / Preset-
Vol -		<<	TUNE- << / Tune-
Home / Smart		Rec	REC MODE Rec / Rec Mode
3D	 +  Shift + 3	Pause	STEP - FREEZE Pause / Step / Freeze
Mute		Text	GOTO TEXT Text / Goto
P +		FAV	PC FAV MARKER Fav / Marker / PC
P -		Exit	CLEAR EXIT Exit / Cancel / Clear
Ratio		Input	RDS AV INPUT AV / Input / RDS
List		Blue	Prime Video RANDOM Blue / Prime Video / Random
Q.Menu		Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
		Stop / Live TV	HOLD Stop / Hold



Original	Replacement	
AV Mode	+	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	+	Shift + Fav / Marker / PC
Search	+	Shift + Red / Netflix /
App	+	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Original	Replacement	
5		5
Q.View	+	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	+	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	+	Shift + Smart / List

