 





 





 






 
 






 














Original	Replacement	Original	Replacement
 Power	 Power	 +/-	 Shift + Guide
 Mute	 Mute	 Recall	 Back
 Auto	 Smart	 Tv Menu	 Menu
 P.Mode	 Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Guide	 Guide
 Display	 Info	 Source	 AV
 Audio/Nicam	 Dual	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Text	 Text
 0	 0	 <<	 <<





Original		Replacement		Original		Replacement	
	>>/Hold		>>		Media		Media
	I<</Index		I<<		Nothing		3D
	>>I/Size		>>I				
	Play		Play				
	Pause		Pause				
	Stop/Subpage		Stop				
	Zoom/Reveal		Eject				
	Sleep		Sleep				
	Tv/Radio		TV/R				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	FAV		Pre Ch				
	Repeat/FAV-		Shift + Ch -				
	FAV+		Shift + Ch +				
	Subtitle		Subt				

