



Original	Replacement
Open / Close	Eject / Surround
Display	Display / Media
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/--
GOTO	+  Shift + Text /
Title / TTX	Text / Goto
Title / TTX	Sound / Title

Original	Replacement
Subtitle	Subtitle / EQ
Angle	Info / Angle
Language	Audio / Lang I/II
Menu	Menu / Home
Up / CH +	CH+ / Page+
Up / CH +	Up
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
<<	<< / Tune-
Down / CH -	Down
Down / CH -	CH- / Page-
>>	>>  / Preset+
>>	>> / Tune+
Play / Pause	Pause / Step / Freeze
Play / Pause	Play / Slow





Original		Replacement		Original		Replacement	
	I<<		I<< / Preset-		Video	+	Shift + 4
	Vol -		Vol-		CD Ripping		Picture / Format
	Vol +		Vol+		A - B		Yellow / YouTube / Repeat
	Stop		Stop / Hold				
	Switch		Smart / List				
	Zoom		Zoom / Size				
	Mute		Mute / Dimmer				
	TV / Radio		TV/Radio /				
	RAN		Blue / Prime Video / Random				
	PBC		Fav / Marker / PC				
	Return		Back / Return				
	L / R		Sleep / Timer				
	N / P		AV / Input / RDS				
	Slow	+	Shift + Play /				
	Repeat		Green / APP / Repeat				
	Prog / EPG	+	Shift + Guide / EPG / -/--				
	Prog / EPG	+	Shift + TV/Radio / Program				

