



Original	Replacement
TEST Test	GOTO TEXT Text / Goto
1 1	TV 1 1
1 1 FM/AM	SHIFT + TV 1 Shift + 1
2 2	DVD 2 2
2 2 FM/AM	SHIFT + DVD 2 Shift + 2
3 3	CD - STB 3 3
3 3 FM/AM	SHIFT + CD - STB 3 Shift + 3
EFFECT Effect	FORMAT PICTURE Picture / Format
4 4	VIDEO 4 4
4 4 FM/AM	SHIFT + VIDEO 4 Shift + 4
5 5	TAPE 5 5
5 5 FM/AM	SHIFT + TAPE 5 Shift + 5
6 6	TUNER 6 6
6 6 FM/AM	SHIFT + TUNER 6 Shift + 6
7/P 7/P	SHIFT + AUX - HDD 7 Shift + 7
7/P 7 FM/AM	AUX - HDD 7 7
8 8	USB 8 8

Original	Replacement
8 8 FM/AM	SHIFT + USB 8 Shift + 8
9 9	BLUETOOTH 9 9
9 9 FM/AM	SHIFT + BLUETOOTH 9 Shift + 9
LEVEL - SURR L Level- SURR L	Down
LEVEL - SURR R Level - SURR R	SHIFT + Down Shift + Down
LEVEL - Center Level- Center	SHIFT + CH PAGE - Shift + CH- /
LEVEL - SUBWFR Level- SUBWFR	Left
LEVEL - Front L Level- Front L	VOL - Vol-
LEVEL - Front R Level- Front R	CH PAGE - CH- / Page-
LEVEL + SURR L Level+ SURR L	Up
LEVEL + SURR R Level+ SURR R	SHIFT + Up Shift + Up
LEVEL + Center Level+ Center	SHIFT + CH PAGE + Shift + CH+ /
LEVEL + SUBWFR Level+ SUBWFR	Right
LEVEL + Front L Level+ Front L	+ VOL Vol+
LEVEL + Front R Level+ Front R	+ CH PAGE CH+ / Page+
10/Return 10/Return	SHIFT + GUIDE EPG Shift + Guide / EPG / -/-
10/Return 10 FM/AM	GUIDE EPG Guide / EPG / -/-





Original	Replacement
 0	 0
 +10	 Fav / Marker / PC
 +10 FM/AM	 Shift + 0
 Play/TA/News/Info	 Shift + Play /
 Play FM/AM	 Play / Slow
 I<</PTY-	 Shift + I<< / Preset-
 I<<FM/AM	 I<< / Preset-
 Pause/PTY Search	 Shift + Pause / Step /
 Pause FM/AM	 Pause / Step / Freeze
 >>I/PTY+	 Shift + >>I / Preset+
 >>I FM/AM	 >>I / Preset+
 Stop/Display	 Shift + Stop /
 Stop FM/AM	 Stop / Hold
 FM/AM	 Shift + TV/Radio / Program
 FM Mode	 TV/Radio /

Original	Replacement





Original		Replacement		Original		Replacement	
	Up		Up				
	Left		Left				
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	Enter		OK				
	Play/TA/News/Info		Shift + Play /				
	Play VCR		Play / Slow				
	I<</PTY-		Shift + I<< / Preset-				
	I<< VCR		I<< / Preset-				
	Pause/PTY Search		Shift + Pause / Step /				
	Pause VCR		Pause / Step / Freeze				
	>>I/PTY+		Shift + >>I / Preset+				
	>>I VCR		>>I / Preset+				
	Rec Pause VCR		Rec / Rec Mode				
	Stop/Display		Stop / Hold				
	Stop VCR		Shift + Stop / Hold				
			Hold				





Original	Replacement	Original	Replacement
Audio Standby	Audio / Lang I/II	FM/AM	Shift + TV/Radio / Program
1	1	VCR	Shift + 4
2	2	Analog/Digital	Smart / List
3	3	FM/Mode	AV / Input / RDS
TV Standby	Power	Surround	Eject / Surround
4	4	DSP	Text / Goto
5	5	Surround DSP	Sound / Title
6	6	Dimmer	Shift + Mute / Dimmer
VCR Standby	Shift + Power	Tv/Video	TV/Radio /
7/P	7	Muting	Mute / Dimmer
DVD Standby	Shift + 2	VCR CH+	Shift + CH+ /
Play/TA/News/Info	Play / Slow	Tv CH+	CH+ / Page+
Sleep	Sleep / Timer	Tv Vol+	Shift + Vol+
I<</PTY-	I<< / Preset-	Vol+	Vol+
Pause/PTY Search	Pause / Step / Freeze	VCR CH-	Shift + CH- /
>>I/PTY+	>>I / Preset+	Tv CH-	CH- / Page-
Stop/Display	Stop / Hold	Tv Vol-	Shift + Vol-



Mode

