


 


 

 





	Original	Replacement		Original	Replacement
	Power		Power		>>I
	Source		AV		<<
	Open/Close		Eject		>>
	Sleep		Sleep		Stop
	1		1		Play
	2		2		Pause
	3		3		Vol +
	4		4		Vol -
	5		5		Mute
	6		6		Repeat
	7		7		Tuning+
	8		8		Tuning-
	9		9		Disc Menu
	0		0		Menu
	Dolby PL		Dual		Title Menu
	DSP/EQ		Guide		Tools
	I<<		I<<		Info





Original		Replacement		Original		Replacement	
	Return		Back				
	Exit		Exit				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Red		Red				
	Green/Tuner		Green				
	Yellow/MO/ST		Yellow				
	Blue/CD Ripping		Blue				
	Dimmer		Subt				
	S.Vol		Format				
	P.Bass/Audio Upscale		3D				





Original	Replacement	Original	Replacement
Power	Power	Pause	Pause
Function Tv	AV	Vol+	Vol +
Sleep	Sleep	Vol-	Vol -
1	1	Mute	Mute
2	2	CH+	Ch +
3	3	CH-	Ch -
4	4	Menu	Menu
5	5	Tools	Options
6	6	Info	Info
7	7	Return	Back
8	8	Exit	Exit
9	9	Up	Up
0	0	Down	Down
<<	<<	Right	Right
>>	>>	Left	Left
Stop	Stop	Enter	Ok
Play	Play	Red	Red



