 












 

 

 



 
 

 


 
 

 
 


 



 
 


Original	Replacement
 Power	 Power
 AMP Power	 Shift + Power
 Tuner Preset Up	 Ch +
 Tuner Preset	 Ch -
 Tuner	 Shift + 1
 CD	 Shift + 2
 Recorder	 Shift + 3
 Network	 Shift + 4
 Phono	 Shift + 5
 Coaxial	 Shift + 6
 Optical	 Shift + 7
 Mode	 Media
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause

Original	Replacement
 Input	 AV
 Info	 Info
 Source Direct	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Time/Top Menu	 Menu
 Q.Replay/Call Favorites	 Back
 Prog/Add to Favorites	 Pre Ch
 Setup	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2

 



 

 


 


 
 












 




 



 



 

 




 

 
 

 













 






 







	Original	Replacement		Original	Replacement
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Clear		Exit		
	Dimmer		Red		
	X/Random		Green		
	Repeat Back		Text		
	Repeat		TV/R		

 







 


 
 
 


 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Source Direct	 Smart
 AMP Power	 +  Shift + Power	 Input	 AV
 Tuner Preset Up	 Ch +	 Info	 Info
 Tuner Preset	 Ch -	 Vol+	 Vol +
 Tuner	 +  Shift + 1	 Vol-	 Vol -
 CD	 +  Shift + 2	 Mute	 Mute
 Recorder	 +  Shift + 3	 Time/Top Menu	 Menu
 Network	 +  Shift + 4	 Q.Replay/Call Favorites	 Back
 Phono	 +  Shift + 5	 Prog/Add to Favorites	 Pre Ch
 Coaxial	 +  Shift + 6	 Setup	 Options
 Optical	 +  Shift + 7	 Up	 Up
 Mode	 Media	 Down	 Down
 I<<	 I<<	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 1	 1
 Pause	 Pause	 2	 2





	Original	Replacement		Original	Replacement
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Clear		Exit		
	Dimmer		Red		
	X/Random		Green		
	Repeat Back		Text		
	Repeat		TV/R		

