


 
 
 


 


 
 
 

 





 
 

 
 
 
 
 

 
 

 
 
 


 
 













 

 



 




 







Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 [=/?]	 Dual	 0	 0
 [=♦]/[+]/Wide	 3D	 PP	 Pre Ch
 [=i]/Guide	 Guide	 [=]	 Text
 [i]/Info	 Info	 Vol+	 Vol +
 [=o]	 Subt	 Vol-	 Vol -
 [=+]/[X]	 Format	 Mute	 Mute
 [=x]/[·]	 Options	 P/CH+	 Ch +
 [/=]/[*]	 Smart	 P/CH-	 Ch -
 1	 1	 P<P/Swap	 Back
 2	 2	 TV/DTV	 TV/R
 3	 3	 AV/Source	 AV
 4	 4	 Menu	 Menu
 5	 5	 -/--	 Shift + Guide
 6	 6	 -/--	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down





Original		Replacement		Original	Replacement
	Right		Right		
	Left		Left		
	OK/Select		Ok		
	Red/↑		Red		
	Green/↓		Green		
	Yellow		Yellow		
	Blue		Blue		

