







 


 













 

 









Original	Replacement
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Picture / Format
	 D.Menu / Top
	 Text / Goto
	 Sound / Title
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold

Original	Replacement
	 Rec / Rec Mode
	 Smart / List
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 Guide / EPG / -/--
	 Down
	 Info / Angle
	 CH+ / Page+
	 CH- / Page-
	 TV/Radio /
	 Vol+
	 Vol-
	 Audio / Lang I/II





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return

Original	Replacement	Original	Replacement

