



Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/Left	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/Right	 >>	 P-	 Ch -
 >◆	 D. Menu	 1	 1
 [ I ]	 Guide	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch





Original	Replacement	Original	Replacement
 [i+]	 Info		
 I-II	 Dual		
 [I>I<]	 Subt		
 [112]	 3D		
 [ I->]	 AV		
 ♪ Smart	 Smart		
 [ ] Smart	 Media		
 [I<>I]	 Back		
 [-o-]/Active Control	 Options		





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original		Replacement		Original		Replacement	
	[> <]		Subt				
	[1 2]		3D				
	[ ]→		AV				
	♪ Smart		Smart				
	[ ] Smart		Media				
	[ <> ]		Back				
	[-o-]/Active Control		Options				





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Replacement	Original	Replacement
 [ > < ]	 Subt		
 [ 1 2 ]	 3D		
 [ ]→	 AV		
 Smart	 Smart		
 [ ] Smart	 Media		
 [  <>  ]	 Back		
 [-o-]/Active Control	 Options		

