



Original		Replacement		Original		Replacement	
	Power Audio		Power		9		9
	Power Tv		Shift + Power		0		0
	Bluetooth Setting		Smart		10		Guide
	Rec Mode		Rec		>10		Pre Ch
	Title Search		Shift + TV/R		Sleep		Sleep
	Tv/Video		TV/R		A.STBY		Media
	Eco Dimmer		3D		Tv Channel +		Ch +
	Display/Chara		Info		Clock/Timer		AV
	Title Edit		D. Menu		Tv Channel -		Ch -
	1/Marc		1		Tv Vol+		Shift + Vol +
	2		2		Tv Vol-		Shift + Vol -
	3		3		Return		Back
	4		4		Top Menu/PG		Shift + Menu
	5		5		Menu/PL		Menu
	6		6		Audio Vol+		Vol +
	7		7		Audio Vol-		Vol -
	8		8		Cancel		Exit





Original	Replacement	Original	Replacement
Fade Muting	Mute	Tuner/Play	Shift + Play
On Screen	Shift + Info	Play/Pause	Red
Up	Up	Play/Pause	Green
Down	Down	Play/Pause	Yellow
Right	Right	Play/Pause Bluetooth	Blue
Left	Left	Audio/MPX	Dual
Enter/Set	Ok	Subtitle	Subt
Stop	Stop	Zoom	Eject
Play	Play	FM/AM/Audio In	Format
Pause	Pause	File Type	Shift + Subt
I<<	I<<	Angle	List
I>>	I>>	Set Up	Options
I<< Group/Title Skip	Shift + I<<	VFP/Scan Mode	Shift + 1
I>> Group/Title Skip	Shift + I>>	3D Phonic/HP Surr	Shift + 2
<<	<<	C.Voice	Shift + Mute
>>	>>	DVD/Audio In	Shift + 3
>> Group/Title	Shift + >>	Sound Mode	Shift + Dual





Original	Replacement	Original	Replacement
 Repeat	 Text		
 My Sound	 Shift + Media		
 V.Bass	 Shift + 4		
 Repeat A-B	 Shift + Text		

