 
 
















 



 


 

 
 
 
 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement
 Guide	 Guide
 ?	 Dual
 Exit	 Exit
 Menu	 Menu
 Back	 Back
 Tools	 Options
 @	 Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 P+	 Ch +





	Original	Replacement	Original	Replacement
		 Ch -		
		 I<<		
		 >>I		
		 <<		
		 >>		
		 Rec		
		 Play		
		 Pause		
		 Stop		
		 3D		
		 Format		
		 Subt		
		 Smart		
		 Shift + Media		

