






 




 

 





 





Original	Replacement
Standby/On	Power
DVD/CD	Shift + 3
DVD/CD	Shift + 2
Tuner (FM/AM)	Shift + 6
USB	Shift + 8
Line	Shift + 1
Open/Close	Eject / Surround
1	1
2	2
3	3
Playlist 1	Red / Netflix / Search
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Playlist 2	Green / APP / Repeat

Original	Replacement
Angle	Info / Angle
Zoom	Zoom / Size
7	7
8	8
9	9
Playlist 3	Yellow / YouTube / Repeat
Clear	Exit / Cancel / Clear
Sleep	Sleep / Timer
Display	Display / Media
Extra PWR	Picture / Format
0	0
Top Menu	D.Menu / Top
Up/Tune+	Up
Up/Tune+	Shift + >> /
Menu	Smart / List
Left/ST-	Left
Left/ST-	Shift + I<< / Preset-





Original	Replacement
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >> / Preset+
 Home Menu	 Menu / Home
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Return	 Back / Return
 Setup	 Setup / OPT /
 Test Tone	 Text / Goto
 Surround	 Shift + Eject / Surround
 Sound	 Sound / Title
 << / < / <	 << / Tune-
 Play	 Play / Slow
 > / >>>	 >> / Tune+
 <<	 << / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 >>	 >> / Preset+
 Power Tv Control	 Shift + Power
 CH+ Tv Control	 Shift + CH+ /
 Vol+ Tv Control	 Shift + Vol+
 Line Out	 AV / Input / RDS
 Input Tv Control	 Shift + AV / Input / RDS
 CH- Tv Control	 Shift + CH- /
 Vol- Tv Control	 Shift + Vol-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+

