 

 



 



 

 

 

 

 





 



 







 



 

 







 



 

 

 

 

 
 



 
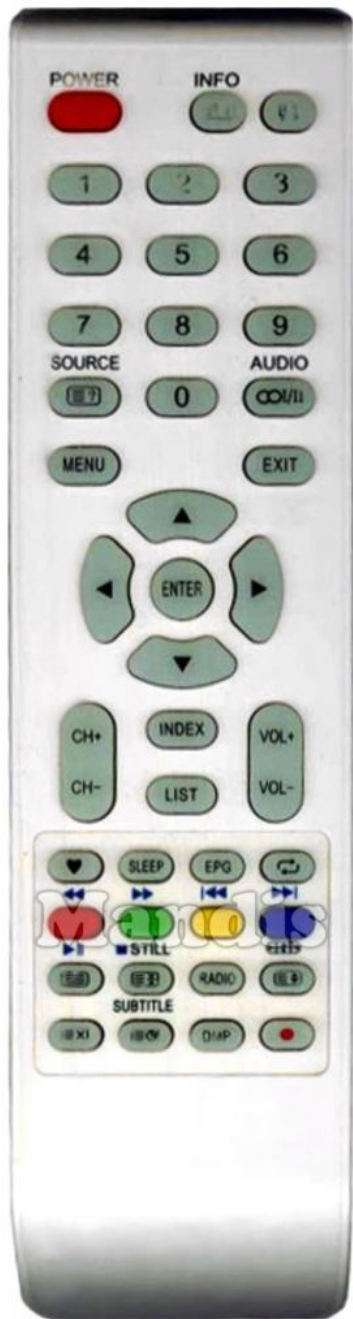 




Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 Fav / Marker / PC	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original		Replacement		Original		Replacement	
	Green		Green / APP / Repeat				
	>>		>> / Tune+				
	Yellow		Yellow / YouTube / Repeat				
	l<<		l<< / Preset-				
	Blue		Blue / Prime Video / Random				
	>>l		>>l / Preset+				
	[≡]		Text / Goto				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	[≡+]		Shift + Stop /				
	Stop/Still		Stop / Hold				
	Radio		TV/Radio /				
	[≡◆]/[++]		Zoom / Size				
	[≡x]		D.Menu / Top				
	[≡o]/Subtitle		Subtitle / EQ				
	DMP		Setup / OPT /				
	Rec		Rec / Rec Mode				

