







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Shift + 1
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV Guide	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Vol +	 Vol+
 P.Mode	 Picture / Format
 CH +	 CH+ / Page+
 Vol -	 Vol-
 S.Mode	 Sound / Title
 CH -	 CH- / Page-
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Info	 Info / Angle





Original	Replacement
Aspect	Shift + Picture / Format
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
Text Hold	Shift + Stop /
Text/DVD Zoom	Zoom / Size
Display Power	Display / Media
Display Power	Shift + Power
Rec / DVD Menu	D.Menu / Top
Rec / DVD Menu	Rec / Rec Mode
I<<<	I<<< / Preset-
>>>I	>>>I / Preset+
Stop / Open/Close	Eject / Surround
Stop / Open/Close	Stop / Hold
Rec List / DVD Setup	Smart / List
Rec List / DVD Setup	Setup / OPT /

Original	Replacement
<<	<< / Tune-
>>	>> / Tune+
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Red / Goto	Red / Netflix / Search
Green / A-B	Green / APP / Repeat
Yellow / Angle / Repeat	Yellow / YouTube / Repeat
Blue / Repeat	Blue / Prime Video / Random

