

 
 




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 < Prev.	 I<< / Preset-
 0	 0
 Next >	 >>I / Preset+
 EPG	 Guide / EPG / -/-
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left

Original	Replacement
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Media	 Display / Media
 Back	 Back / Return
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Timer		Shift + Sleep / Timer
	Web		Smart / List
	Plugin		Picture / Format
	Audio		Audio / Lang I/II
	PIP		Zoom / Size
	Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV		Shift + 1
	Radio		TV/Radio /
	Help		AV / Input / RDS

