

 
 


| Original     | Replacement                | Original | Replacement               |
|--------------|----------------------------|----------|---------------------------|
| Standby      | Power                      | NICAM    | Shift + Audio / Lang I/II |
| Open/Close / | Eject / Surround           | CH +     | CH+ / Page+               |
| MUTE         | Mute / Dimmer              | VOL -    | Vol-                      |
| 1            | 1                          | DISPLAY  | Display / Media           |
| 2            | 2                          | CH -     | CH- / Page-               |
| 3            | 3                          | Up       | Up                        |
| 4            | 4                          | Left     | Left                      |
| 5            | 5                          | OK       | OK                        |
| 6            | 6                          | Right    | Right                     |
| 7            | 7                          | LCD MENU | Shift + Menu /            |
| 8            | 8                          | Down     | Down                      |
| 9            | 9                          | EXIT     | Exit / Cancel / Clear     |
| -/--         | Shift + Guide / EPG / -/-- | INPUT    | AV / Input / RDS          |
| 0            | 0                          | P.MODE   | Picture / Format          |
| RECALL       | Back / Return              | S.MODE   | Sound / Title             |
| VOL +        | Vol+                       | SLEEP    | Sleep / Timer             |
| ASPECT       | Shift + Picture / Format   | FAV      | Fav / Marker / PC         |





| Original  | Replacement   |
|---|---|
|  FAV -             |  Shift + CH- /             |
|  FAV +             |  Shift + CH+ /             |
|  EPG               |  Guide / EPG / -/--        |
|  TEXT              |  Text / Goto               |
|  HOLD              |  Shift + Stop /            |
|  Subtitle          |  Subtitle / EQ             |
|  TV/RADIO          |  TV/Radio /                |
|  INDEX / D.DISP    |  Menu / Home               |
|  SIZE / ZOOM       |  Zoom / Size               |
|  REVEAL/ANGLE     |  Info / Angle             |
|  TITLE / Subpage |  Shift + Sound / Title   |
|  D.MENU          |  D.Menu / Top            |
|  Audio           |  Audio / Lang I/II       |
|  Goto            |  Shift + Text /          |
|  Setup           |  Setup / OPT /           |
|  MEDIA           |  Shift + Display / Media |
|  PLAY/PAUSE      |  Play / Slow             |

| Original  | Replacement   |
|---|---|
|  PLAY/PAUSE    |  Shift + Play /                |
|  <<            |  << / Tune-                    |
|  >>            |  >> / Tune+                    |
|  REC           |  Rec / Rec Mode                |
|  STOP          |  Stop / Hold                   |
|  I<<           |  I<< / Preset-                 |
|  >>I           |  >>I / Preset+                 |
|  RED / Prog    |  Red / Netflix / Search        |
|  GREEN / Intro |  Green / APP / Repeat          |
|  YELLOW /     |  Yellow / YouTube / Repeat    |
|  YELLOW /    |  Shift + Yellow / YouTube /  |
|  BLUE / A-B  |  Blue / Prime Video / Random |

