


 





























 

 
 








Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute / Dimmer		Info		Info / Angle
	Rec		Rec / Rec Mode		<<		<< / Tune-
	TV Sys.		D.Menu / Top		Vol -		Vol-
	Browser		Display / Media		Vol +		Vol+
	Copy		Picture / Format		I<<		I<< / Preset-
	Music		Smart / List		>>		>> / Tune+
	1		1		Play / Pause		Play / Slow
	2		2		Play / Pause		Pause / Step / Freeze
	3		3		Stop		Stop / Hold
	4		4		>>I		>>I / Preset+
	5		5		Home		Shift + Menu /
	6		6		Up		Up
	7		7		Return		Back / Return
	8		8		Left		Left
	9		9		Enter		OK
	Repeat		Shift + Green / APP / Repeat		Right		Right





	Original	Replacement		Replacement
	Menu		Menu / Home	
	Down		Down	
	Setup		Setup / OPT /	
	Time Shift		Sleep / Timer	
	Slow I>		Shift + Play /	
	A-B		Shift + YouTube /	
	Goto		Shift + Text /	
	Zoom		Zoom / Size	
	Audio		Audio / Lang I/II	
	Subtitle		Subtitle / EQ	
	Angle		Shift + Info / Angle	
	Red		Red / Netflix / Search	
	Green / EPG		Green / APP / Repeat	
	Green / EPG		Guide / EPG / -/--	
	Yellow / Text		Text / Goto	
	Yellow / Text		Yellow / YouTube / Repeat	
	Blue		Blue / Prime Video / Random	

	Original	Replacement

