


 




 







 














 






 
 

 







 

 

 

 

 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Exit	 Exit
 4	 4	 Home	 Smart
 5	 5	 <<	 <<
 6	 6	 >>	 >>
 7	 7	 Play / Pause	 Play
 8	 8	 Play / Pause	 Pause
 9	 9	 Stop	 Stop
 0	 0	 TV System	 Media
 FAV	 Pre Ch	 Vol +	 Vol +
 SUB-T	 Subt	 Vol -	 Vol -
 Option	 Options	 Edit	 D. Menu
 Setup	 Menu	 Audio	 Dual
 Up	 Up	 Info	 Info





Original	Replacement
 I<< / P +	 Ch +
 I<< / P +	 I<<
 >>I / P -	 Ch -
 >>I / P -	 >>I
 Repeat	 Text
 Goto	 Guide
 Zoom	 Eject

Original	Replacement

