



Original		Replacement		Original		Replacement	
	Power CD		Power		>>I Bluetooth/FM		Shift + >>I / Preset+
	Power		9		>>I USB/Audio In		Shift + I<< / Preset-
	Power USB/Audio		Shift + Power		Album/Preset Down CD		Down
	Open/Close		Eject / Surround		Album/Preset Down		CH- / Page-
	Bluetooth/FM		Shift + 9		Album/Preset Down USB/Audio		Shift + Down
	CD		3		Repeat		Green / APP / Repeat
	USB/Audio In		8		Repeat USB/Audio		Back / Return
	Album/Preset Up		Up		Vol+		Vol+
	Album/Preset Up Bluetooth/FM		CH+ / Page+		Stop CD		Stop / Hold
	Album/Preset Up USB/Audio In		Shift + Up		Stop USB/Audio In		Shift + Stop /
	I<< CD		I<< / Preset-		Vol-		Vol-
	I<< Bluetooth/FM		Shift + Left		Shuffle		Blue / Prime Video / Random
	I<< USB/Audio In		Left		Shuffle USB/Audio In		AV / Input / RDS
	Play CD		Play / Slow		Mute		Mute / Dimmer
	Pause CD		Pause / Step / Freeze		Display		Display / Media
	Play/Pause USB/Audio In		Shift + Play /		Display USB/Audio In		Shift + Display / Media
	>>I CD		>>I / Preset+		Prog		TV/Radio /





Original	Replacement	Original	Replacement
 Prog USB/Audio In	 +  Shift + TV/Radio / Program		
 Sound	 Sound / Title		
 Clock	 +  Shift + Sleep / Timer		
 Sleep/Timer	 Sleep / Timer		

