



 




 



 

 

 

 

 

 







 




Original	Replacement
 Power	 Power
 Repeat	 Text
 A-B	 Shift + Text
 Open / Close	 Eject
 N / P	 TV/R
 Subtitle	 Subt
 Angle	 Format
 Language	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 10+	 Guide
 Time	 AV
 Setup	 Options
 Title	 Media
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 PBC	 Smart
 Menu	 Menu
 Vol -	 Vol -
 Vol +	 Vol +
 Zoom	 Shift + Eject
 P Scan	 Back
 L / R	 Shift + Dual





Original	Replacement	Original	Replacement
 Step	 +  Shift + Pause		
 Slow	 Red		
 Program	 Sleep		
 Clear	 Exit		
 Mute	 Mute		
 Display	 Info		
 Prev I<<<	 I<<<		
 Next >>>I	 >>>I		
 Rev <<<	 <<<		
 Fwd >>>	 >>>		
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 V-Mode	 Green		

