


















 

 

 
 













Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 <->	 Exit
 0	 0
 Recall	 Pre Ch
 Vol +	 Vol +
 Info	 Info
 CH +	 Ch +

Original	Replacement
 Vol -	 Vol -
 Aide	 Smart
 CH -	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Retour	 Back
 Down	 Down
 Menu	 Menu
 <<	 <<
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 >>	 >>
 Red	 Red
 Green	 Green



