




 




 






 
 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original	Replacement	Original	Replacement
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow / I<<	 I<< / Preset-		
 Yellow / I<<	 Yellow / YouTube / Repeat		
 Blue / >>I	 Blue / Prime Video / Random		
 Blue / >>I	 >>I / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		





Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		Fav / Marker / PC		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		
	>> >> / Tune+		
	Yellow Yellow / YouTube / Repeat		
	l<< l<< / Preset-		
	Blue Blue / Prime Video / Random		
	>>l >>l / Preset+		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	[≡] Text / Goto		
	Stop/Still Stop / Hold		
	[≡+] Picture / Format		
	[≡o]/Subtitle Subtitle / EQ		
	[≡◆]/[+] Zoom / Size		
	[≡x] Setup / OPT /		
	Radio TV/Radio /		
	Audio Audio / Lang l/ll		
	Rec Rec / Rec Mode		

