
 
 






 

 
 

 
 
 



 


 



 
 
 
 



 





Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 +  Shift + Red	Menu Off	 Exit
Reveal	 +  Shift + Green	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Menu audio	 Dual
Info	 Info	Chan.Up	 Ch +
Menu video	 D. Menu	Volume-	 Vol -
Return TV	 +  Shift + Back	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Nicam/Mono	 +  Shift + Dual
9	 9	Level R/Woofer	 >>
Guide -/-- 1.	 GUIDE	Aft/Caf	 SMART
0/10	 0	Store	 MEDIA
2.Fav P/C 2.	 PRE-CH	Search	 TV/R
Red	 A	Tune-	 +  Shift + Left
Green	 B	Tune+	 +  Shift + Right
Yellow	 C	Contrast-	 +  Shift + Ch -
Bright+ Mode	 OPT		
Blue	 D		
Rotate Text	 +  Shift + Mute		
Contrast+	 +  Shift + Format		
Tone-	 3D		
Mix Scan	 LIST		
Color- S.Std	 FORMAT		
Game Coo	 +  Shift + Smart		
Level L	 I<<		

