 
 



 
 
 
 

 

 


 
 







 








Original	Replacement	Original	Replacement
 Power	 Power	 Rec List	 List
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Source	 AV
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Exit	 Exit
 0	 0	 Display	 Info
 DTV / ATV	 Shift + TV/R	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Dual
 V +	 Vol +	 Sleep	 Sleep
 V -	 Vol -	 Fav / List	 Pre Ch
 Rec	 Rec	 MTS	 Shift + Dual





Original	Replacement
Freeze	Shift + Pause
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
<< / Guide	<<
<< / Guide	Guide
Play/Pause / Timeshift	Play
Play/Pause / Timeshift	Pause
>> / Aspect	>>
>> / Aspect	Format
I<< / Cancel	I<<
I<< / Cancel	Shift + Exit
>>I / Sub.Pg	>>I
>>I / Sub.Pg	Shift + Subt
Stop / Index	Stop
Stop / Index	Shift + Info

Original	Replacement
TV / Radio	TV/R
Subtitle	Subt
Reveal	Options
Size	Eject
Hold	Shift + Stop
Text	Text

