



 

 







 










 

 










 




















 
 






| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Media |  Display / Media |
|  Portal |  Shift + Menu / |
|  Help |  Shift + Info / Angle |
|  Menu |  Menu / Home |
|  Up |  Up |

| Original | Replacement |
|--|---|
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Guide |  Guide / EPG / -/-- |
|  i |  Info / Angle |
|  Vol + |  Vol+ |
|  Back |  Back / Return |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Filelist |  Smart / List |
|  CH - |  CH- / Page- |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |





| Original | Replacement | Original | Replacement |
|---|-------------|--|-----------------------|
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |
|  | I<< |  | I<< / Preset- |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | >>I |  | >>I / Preset+ |
|  | TV / Radio |  | TV/Radio / |
|  | Audio |  | Audio / Lang I/II |
|  | Subt |  | Subtitle / EQ |
|  | TTX |  | Text / Goto |
|  | Timer |  +  | Shift + Sleep / Timer |
|  | Sleep |  | Sleep / Timer |
| | | | |
| | | | |
| | | | |

