


 















 






 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search








 


























 



 







 







 

 

 




















 










Original	Replacement	Original	Replacement
Green / >>>	>>> / Tune+		
Green / >>>	Green / APP / Repeat		
Yellow / I<<<	I<<< / Preset-		
Yellow / I<<<	Yellow / YouTube / Repeat		
Blue / >>>I	>>>I / Preset+		
Blue / >>>I	Blue / Prime Video / Random		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Play / Slow		
Text / Play/Pause	Pause / Step / Freeze		
Stop / Still	Stop / Hold		
Radio	TV/Radio /		
Size / Aspect	Picture / Format		
Size / Aspect	Zoom / Size		
[≡x]	Eject / Surround		
Subtitle / [≡o]	Subtitle / EQ		
DMP	D.Menu / Top		
Rec	Rec / Rec Mode		





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 REC MODE	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG I/II
 SOUND	 AUDIO	 PICTURE	 ZOOM
 TOP MENU	 OPT-TOOLS	 D.MENU	 SETUP
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 LIST
 +	 SMART	 VOL	 MEDIA
 TV	 DVD	 1	 TAPE
 4	 5	 7	 8
 8	 9	 GUIDE	 EPG
 NETFLIX	 APP	 SEARCH	 REPEAT
 APP	 YouTube	 REPEAT A-B	 RANDOM
 Prime Video	 www.mandis.tv		





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		
	>> >> / Tune+		
	Yellow Yellow / YouTube / Repeat		
	I<< I<< / Preset-		
	Blue Blue / Prime Video / Random		
	>>I >>I / Preset+		
	[≡] Text / Goto		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	[≡+] Shift + Stop /		
	Stop/Still Stop / Hold		
	Radio TV/Radio /		
	[≡♦]/[++] Zoom / Size		
	[≡x] Eject / Surround		
	[≡o]/Subtitle Subtitle / EQ		
	DMP D.Menu / Top		
	Rec Rec / Rec Mode		

