 



 



 
 




 




 
 



 


 












 


 









 






 










Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Freeze	 Pause	 9	 9
 Subtitle	 Subt	 0	 0
 Guide	 Guide	 Jump	 Back
 Fav.CH	 Pre Ch	 ENT	 Smart
 I-II	 Dual	 Vol +	 Vol +
 Text / Mix	 Text	 Vol -	 Vol -
 Mute	 Mute	 Info	 Info
 Sleep	 Sleep	 Input	 AV
 P.Size	 Format	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Menu	 Menu
 4	 4	 P.Mode	 Shift + Format
 5	 5	 S.Mode	 Shift + Dual
 6	 6	 Up	 Up
 7	 7	 Right	 Right





	Original	Replacement		Original	Replacement
	Down		Down		
	Left		Left		
	OK		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text Size		Eject		
	Text Reveal		TV/R		
	Text Index		List		
	Text Hold		Stop		

