



Original	Replacement
	TV/Radio /
	Power
	AV / Input / RDS
	D.Menu / Top
	I<< / Preset-
	>>I / Preset+
	Sleep / Timer
	Text / Goto
	Sound / Title
	Picture / Format
	Audio / Lang I/II
	Menu / Home
	Info / Angle
	Exit / Cancel / Clear
	Left
	Up
	Right















 

Original	Replacement
	OK
	Down
	Red / Netflix / Search
	Shift + CH- /
	Green / APP / Repeat
	Shift + CH+ /
	Yellow / YouTube / Repeat
	Back / Return
	Shift + AV / Input / RDS
	Blue / Prime Video / Random
	Vol+
	CH+ / Page+
	Vol-
	Mute / Dimmer
	Smart / List
	CH- / Page-
	1







Original	Replacement
 Power DVD	 Power
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >>  / Preset+
  <<	  << / Preset-
 Power Audio	 Shift + Power
 Vol+ Audio	 Vol+
 Vol- Audio	 Vol-
 Mute Audio	 Mute / Dimmer












 


 














 



 


 

Original	Replacement
	Power
	AV / Input / RDS
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold

Original	Replacement
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+





Original	Replacement
 Power STB	 Power
 Input STB	 AV / Input / RDS
 Menu STB	 Menu / Home
 Up STB	 Up
 OK STB	 OK
 Down STB	 Down
 Right STB	 Right
 Left STB	 Left
 Vol+ STB	 Vol+
 Vol- STB	 Vol-
 Mute STB	 Mute / Dimmer
 PR+ STB	 CH+ / Page+
 PR- STB	 CH- / Page-
 1 STB	 1
 2 STB	 2
 3 STB	 3
 4 STB	 4

Original	Replacement
 5 STB	 5
 6 STB	 6
 7 STB	 7
 8 STB	 8
 9 STB	 9
 0 STB	 0
 Power Cable	 Shift + Power
 Menu Cable	 Shift + Menu /
 Up Cable	 Shift + Up
 OK Cable	 Shift + OK
 Down Cable	 Shift + Down
 PR+ Cable	 Shift + CH+ /
 PR- Cable	 Shift + CH- /
 Vol+ Cable	 Shift + Vol+
 Vol- Cable	 Shift + Vol-
 Mute Cable	 Shift + Mute / Dimmer
 1 Cable	 Shift + 1





	Original		Replacement	
	2 Cable		<b>2</b>	Shift + 2
	3 Cable		<b>3</b>	Shift + 3
	4 Cable		<b>4</b>	Shift + 4
	5 Cable		<b>5</b>	Shift + 5
	6 Cable		<b>6</b>	Shift + 6
	7 Cable		<b>7</b>	Shift + 7
	8 Cable		<b>8</b>	Shift + 8
	9 Cable		<b>9</b>	Shift + 9
	0 Cable		<b>0</b>	Shift + 0

Original	Replacement

