


 





 





 





 

 















Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT +  Shift + Guide
 Recall	 RETURN BACK Back
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Nicam	 HOME SMART Smart

Original	Replacement
 Auto	 APP MEDIA Media
 Display	 SHIFT +  DISPLAY INFO Shift + Info
 CH+	 + CH Ch +
 CH-	 CH - Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 OK Ok
 LCD Menu	 TOP MENU MENU Menu
 DVB Menu	 E-MANUAL D.MENU D. Menu
 Input	 TIMER AV AV
 P.Mode	 PICTURE FORMAT Format
 S.Mode	 SHIFT +  SETTINGS OPT Shift + Options
 Sleep	 PROG SLEEP Sleep
 Info	 DISPLAY INFO Info
 FAV	 FAV PRE-CH Pre Ch



