


 

 




 










 


 







 






 
 

 

 







 









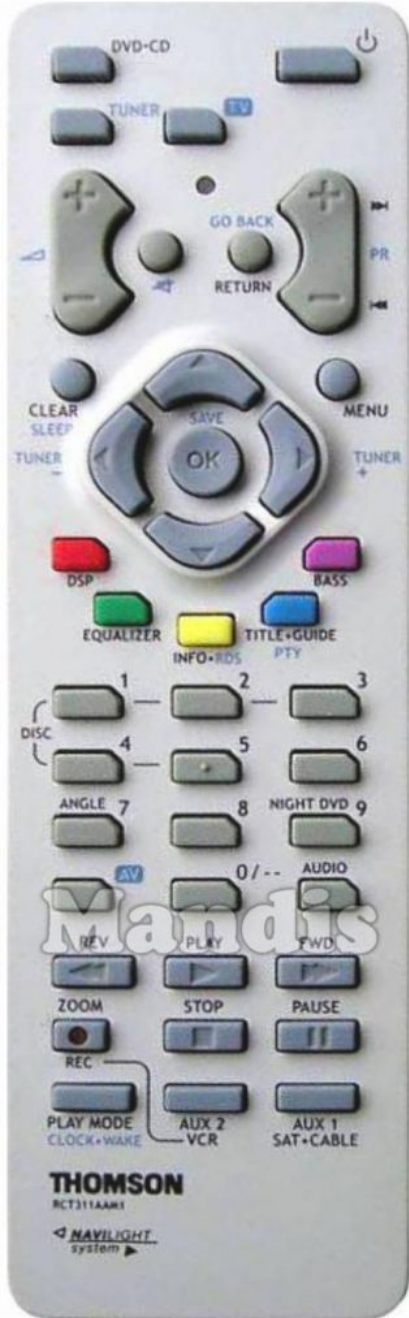 


Original	Replacement	Original	Replacement
 Power	 Power	 DVD / CD	 Media
 Mute	 Mute	 Vol +	 Vol +
 Menu	 Menu	 Vol -	 Vol -
 1 / Disc 1	 1	 >>I	 >>I
 2 / Disc 2	 2	 I<<	 I<<
 3 / Disc 3	 3	 Up	 Up
 4 / Disc 4	 4	 Right	 Right
 5 / Disc 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7 / Angle	 7	 OK / Save	 Ok
 8	 8	 Return	 Back
 9 / Night DVD	 9	 Sleep	 Sleep
 0 / --	 0	 Play Mode	 Shift + Play
 Aux 1 / SAT /	 AV	 Pause	 Pause
 Aux 2 / VCR	 Shift + AV	 Stop	 Stop
 Tuner	 Shift + TV/R	 Rec / Zoom	 Rec
 TV	 TV/R	 << REV	 <<





Original	Replacement	Original	Replacement
Play	Play		
>> FWD	>>		
Audio	Dual		
PR +	Ch +		
PR -	Ch -		
Tuner -	Shift + Left		
Tuner +	Shift + Right		
Purple / Bass	Pre Ch		
Red / DSP	Red		
Green / Equalizer	Green		
Yellow / Info	Yellow		
Blue / Title/Guide	Blue		
Yellow / Info	Info		
Blue / Title/Guide	Guide		

Original	Replacement	Original	Replacement

